


WEBBGLIDE INSTALLATION & LAYOUT

BRACKET (LEFT SIDE)

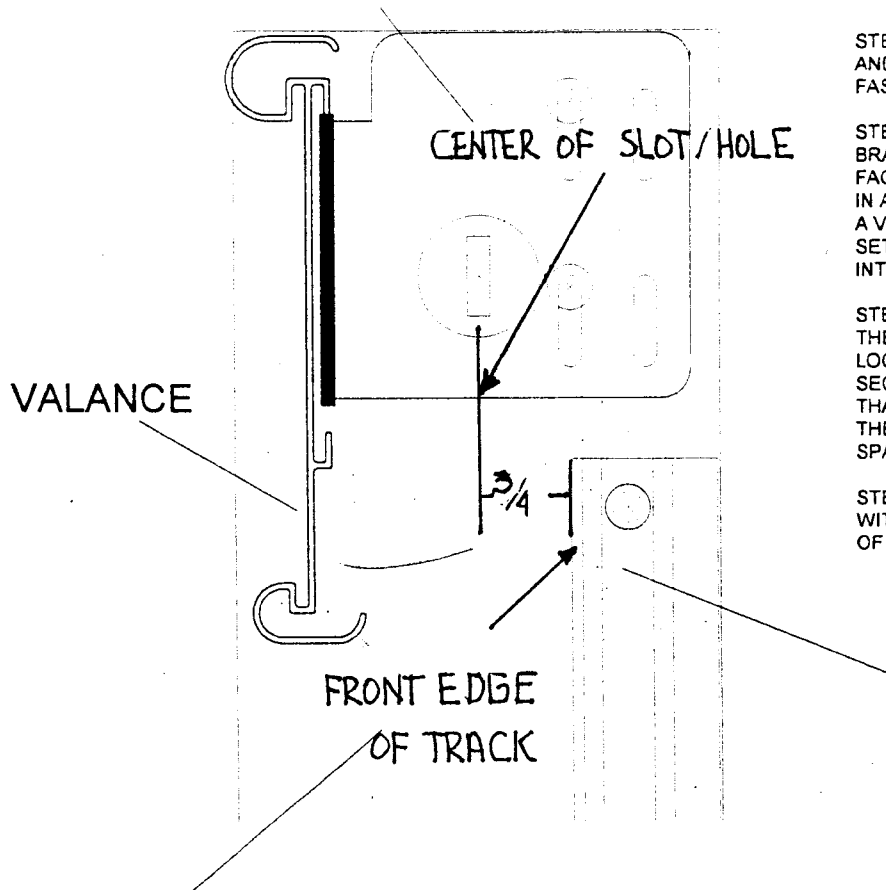

INSTALLATION STEPS

STEP 1: DETERMINE BRACKET LOCATION AS SHOWN AND INSTALL BRACKETS USING APPROPRIATE FASTENERS PROVIDED.

STEP 2: UNROLL SHADE AND PLACE ROLLER INTO BRACKETS WITH NAIL HEAD ON SQUARE END FACING UP. ADJUST LENGTH OF ROLLER BY PULLING IN AND OUT ON THE WOODEN END (THERE MUST BE A VERY SMALL AMOUNT OF "PLAY" IN THE ROLLER FIT. SET THE LENGTH BY INSTALLING A #8 X 1/2" SCREW INTO THE WOOD AGAINST THE ROLLER TUBE.

STEP 3: SLIDE ONE GUIDE TRACK ONE AT A TIME ON TO THE TIPS AND PLACE THEM WITHIN THE WINDOW, LOCATING THEM UNDER THE BRACKET AS SHOWN. SECURE THEM WITH THE SCREWS PROVIDED. NOTE THAT THE TOP SCREW IN EACH TRACK IS WITHIN THE TRACK "LIPS" AND SHOULD HAVE A NYLON SPACER PLACED ON THE SCREW AS IT IS INSTALLED.

STEP 4: THE VALANCE ATTACHES TO THE BRACKETS WITH "VELCRO" AND SHOULD BE AGAINST THE TOP OF THE WINDOW.

WINDOW FRAME

WEBB
WEBB DESIGNS, INC.

Factory:
1155 N. Johnson Av.
P. O. Box 1405, El Cajon, Ca, 92020
Ph: (619) 442-0391 Fax: (619) 442-5968 Web: WWW.WEBBSHADE.COM

Shade Installation Steps:

1. Determine bracket, mullion and track location. (see attached). Install as described.
2. Unroll shade and place end tips (the pvc ends at the bottom of the shade) in the track.
3. Place roller in bracket plates, making sure that the nail is facing up. Adjust length of roller by pulling/pushing the wooden end. (There must be a very small amount of play between the roller and the plates.)
4. Remove the nail.
5. Verify that the shade functions properly. While all roller tension is set at the factory, on occasion a few turns need to be added or removed. If, while pushing the shade up, the material buckles, a couple of turns should be added to the spring tension. If while closed, the shade creeps up, a few turns need to be removed.
To add tension: Replace the nail. Remove the roller from the brackets. Grasp the roller in your left hand. Using a pair of vice grips turn the drive pin slightly to allow easy removal of the nail. Turn the drive pin clockwise to add turns. Replace the nail and place the roller into the brackets. Be sure not to let the vice grip slip off or drop the roller while the nail is out as this will release all the spring tension.
To remove tension: Replace the nail. Remove the roller from the brackets. Grasp the roller in your left hand. Using a pair of vice grips turn the drive pin slightly to allow easy removal of the nail. Turn the drive pin counter clockwise to remove tension. Replace the nail and place the roller into the brackets. Be sure not to let the vice grip slip off or drop the roller while the nail is out as this will release all the spring tension.
6. After determining that the shade is functioning properly, unroll the shade from the roller until you can see the flat part of the wood extension. Using a #8 x 1/2" sms fastener, lock the shade in place by screwing the #8 on the flat of the wood next to the roller tube. (see drawing).
7. For the mullions, slide a 1/4" white spacer over a #10 x 3/4" sds fastener and screw it into the pre-drilled hole in the top of the track. For the track on the wall, slide a 1/4" white spacer over a #10 x 1-1/4 sms fastener and screw it into the pre-drilled hole in the top of the track.
8. The valance attaches to the brackets with "velcro" and should be against the top of the window to eliminate light leak.